

# 100W Moving Head User Manual

**1、 Voltage: AC220V/50Hz**

**2、 Power: 150W**

**3、 LED: 100 W**

**4、 Working Model: DMX512,Master/Slave Auto SOUND**

**5.Dimming: 0~100%**

## Menu

Menu	Introductions
Addr	A001---A512
CHnd	12CH
SLnd	Working Model
Pan	YES, NO MotorX
Tilt	YES, NO MotorY
SEne	(0-100)
LED	ON, OFF
DISP	YES, NO
TEMP	XXX
Ver	V100
Faet	YES, NO

Fine            Press Menu5S  
 Pan            0-127 -1-127 X  
 Tilt            0-127 -1-127 y  
 Color          0-127 -1-127  
 Gobo          0-127 -1-127

12Chs	Functions	DMX	Details
1	X	0-255	
2	X Fine	0-255	
3	Y	0-255	
4	Y Fine	0-255	
5	X Y Speed	0-255	Fast To Slow
6	Gobo	0-255	

7	Gobo Strobe	0	No
		1-255	(1HZ~25HZ)
8	Color Gobo	0--15	W
		16--31	Color1
		32--47	Color2
		48--63	Color3
		64--79	Color4
		80--95	Color5
		96--111	Color6
		112--127	Color7
		128-191	Auto Change1
		192-255	Auto Change2
9	GOBO	0-7	W
		8--15	Gobo1
		16-23	Gobo2
		24-31	Gobo3
		32-39	Gobo4
		40-47	Gobo5
		48-55	Gobo6
		56-63	Gobo7
		64-73	Gobo7 Shake
		74-82	Gobo6 Shake
		83-91	Gobo5 Shake
		92-100	Gobo4 Shake
		101-109	Gobo3 Shake
		110-118	Gobo2 Shake
		119-127	Gobo1 Shake
		128-191	Auto Change1
192-255	Auto Change2		
10	Prism	0-7	Close
		8-127	opentheprism
		128-255	prismrotatesfromslowtofast
11	MACRO	0-49	Chs1-10
		50-200	Auto
		201-255	Sound
12	REST	0-240	no
		241-255	5S