

Fire Machine



Warranty Card

Name	Model	Production	Purchase
------	-------	------------	----------

End User
Company Name:
Add:

Sale Store
Link man:
Tel: Stamp

Description: These must be truthfully fill, seal by the end-user and point-of-sale, or else the warranty will not work (warranty period and terms, see the following)

warranty period: one year since purchase warranty terms: 1、 If fail when using the product in normal state, you can made under the provisions of the warranty, show the warranty card and purchase bills(copy), and enjoy free maintenance service in a specific service center or the manufacturer.

2. The following will be the implementation of paid service:

- (1)Without the effective warranty card
- (2)There's blank, alter and no point-of-sale name
- (3)Fail caused by something can not resistance
- (4)Fail caused by transportation or unloading
- (5)Fail caused by not operate by manual
- (6)Fail caused by disassemble without unauthorized
- (7)Fail caused by using the unauthorized control system

Note:

Based on our company continue to improve the product, the statement containing data may have changed, and will not notice the change any more. Company retains its right to change specifications related when product is improved. Thanks for your understanding.

Fire Machine

USER MANUAL Fire Machine



This manual contains important information.
Please read before operating fixture.



Fire Machine


Flamethrower Instructions

WARNING!!! To reduce the risk of fire, electric shock, or injury to persons, follow these important safety instructions:

First of all, thank you for picking up our machine. Please thoroughly read this manual before operating it and keep it well for future reference.

- Please make the body and parts of machine is ok when open the package
- this machine which easy to catch fire , therefore, it shall be installed in the Place with 8M diameter 3M height and without any flammable materials .
- Put the machine in the proper place with the spout upward
- Put the bottle oil into the fire machine , and choose the control mode .Pull the power switch up the machine controlled by DMX , if pull down the machine controlled by manual control .
- the DMX 512 address introduction :

the series number of address code toggle switch is corresponding with the DMX 512 console address code: the number 1,2,3,4,5,6,7,8 in address code switch is corresponding 1,2,4,16,32,64,128 in DMX 512 console address code respectively as the below photo :

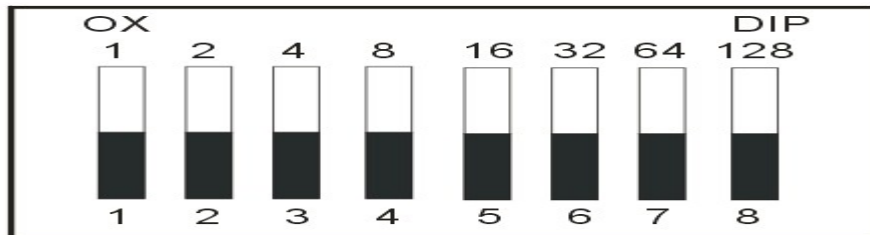

Fire Machine

coded method : it use accumulation method ,plus all the DMX512 address code value which toggle switch corresponding is the current address code, for example , pull 5 toggle switch on , the current code is 16 , pull 512 console 16ch is ok , when pull 1,2,3 toggle switch on, the current code is 7 , so pull 512 console 7ch is ok ,when pull 6,7,8 toggle switch on, the current code is 224 , pull DMX 512 console to 224 is ok , if pull 2 1,2,3 toggle switch on, the current code is 2., so pull 512 console 2ch is ok . The rest may be deduced by analogy .

- this machine can controlled by DMX 512 signal ,connect the power and DMX 512 , and then can use it (recommend) .
- spout upward button operation mode : connect the power , the machine can spout fire lasting , and take the fire pillar shape .(Warning : it's dangerous, spout upward time can not exceed 5 seconds !)
- This machine have the automatic protection function , it will can automatic interrupt the power supply if the fire spout exceed 3 second .
- The continued spout fire time can not exceed 3 second .

2 TECHNOLOGY REFERENCE

- Voltage: AC220V, 10%, 50Hz-60Hz
- Fire Height: 1-2m
- Power: 200W
- Coverage: 1 m²

IMPORTANT INFORMATION!

In order to optimise the recovery and recycling of the materials that old appliances contain and reduce the impact on human health and the environment, ensure that this product is recycled at the end of its life.

