


Digital machine button function description: (When using the console control, some functions of the digital can not be used, only press the plus or minus button)

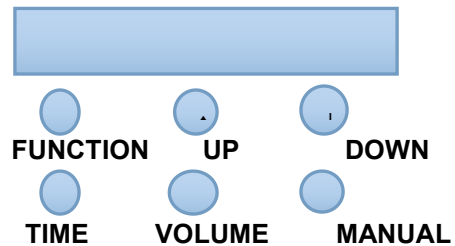

Key Description:FUNCTION-----

UP-----

DOWN-----

TIME-----

VOLUME—

MANUAL—

Screen display content explanation:

Interval set 1-200S

Duration set 1-200S

Volume set 1-100%

Dmx512 #000-#512

Ready to fazer



Please read this manual carefully before using the fog machine.

## Technical Parameters

Voltage: 110V 50HZ~60HZ

Power consumption: 2000W

Oil drum capacity: 3 L

Smoke time: about 8 hours (100% numerical smoke)

Warm-up time: 70 seconds

Channel: 2 channels

Control mode: DMX-512, digital LCD control, remote control option

Machine size: 57\*19\*47CM

Weight: 1.5KG

## Precautions

\* Suitable for indoor and outdoor use.

\* Before using, please make sure the power supply is the correct rated voltage.

\* Do not add flammable liquids such as oil, gas or spices in oil drums.

\* The hood should be installed in a well-ventilated place. Do not cover the vents of the hood to ensure proper ventilation and heat dissipation. Keep the space around the upper and lower sides of the hood at least 20cm, and do not store flammable materials within 300cm. (away from carpets, planks and flammable objects).

\* Do not let the machine work if the oil is used up, otherwise it will cause some internal parts to heat up and damage the electronic components.

\* There is a little noise when the machine is working, which is normal.

\* The hood is not waterproof. If moisture, water, or smoke enters the machine, immediately turn off the power and contact your dealer.

\* There are no user-serviceable parts inside the machine. Please check with the dealer or qualified maintenance personnel.

\* Before mailing or shipping, be sure to pour out all the smoke in the bucket and pack it properly (preferably in the original packaging).

\* Do not accumulate obstacles in the smoke outlet, because this fog machine is the principle of using the fan to slowly blow out the smoke.

## Instructions:

1. Lay the fog machine flat and open the oil drum cover.

2. Inject high-quality smoke agents (such as FC cards) into the bucket and tighten the lid. Please note that inferior smoke agents can damage the fog machine and affect the best results of the fog machine.

3. Insert the power cord into the power socket on the rear panel of the hood and press the black switch (POWERON/OFF) to the ON position. The power is on and the display is on. At this point, it indicates that the machine is already in the heating state. To use the machine normally, it should be preheated for 42 seconds in advance, and the preheating is completed. Then control the normal operation of the machine according to the controller you choose.

## DMX512 connection:

### DMX instructions

CH	value	Features
1	0-255	Adjust the size of the wind
2	0-255	Adjust the size of the smoke