

SNOW OIL

Ratio: 1:20 (5 kg of oil can be used for about 20 to 30 minutes)

(1 kg of snow oil plus 20 kg of water, the effect of using pure water is better, it must be stirred evenly into a viscous shape)

MACHINE CLEANING AND MAINTENANCE

1. After use, clean the oil drum and replace it with clean water, re-start the machine to spray out clean water without foam, and keep the cloth cover clean;
2. If it has not been used for a long time, it must be replaced with new snowflake oil;
3. If the snowflakes become smaller or stop working:
 - ① Turn off the power immediately and check whether the power cord and fuse are in good condition;
 - ② Pull out the control wire and check whether the wiring is good;
 - ③ Check the stock of snowflake oil in the bottle;
 - ④ Check whether the filter in the nozzle, the filter in the bottle and the snow spray cloth are blocked or damaged;
 - ⑤ Check the potentiometer knob and oil pump on the control box, if you have any other questions, please contact a professional;

PRECAUTIONS

1. Remember: Do not unplug the cloth cover on the snow machine.
2. When shutting down: first reduce the amount of snowflakes, wait for the blower to blow for about 30 seconds, and then turn off the power (to protect the blower, it will not burn out);
3. Fuse holder: to prevent leakage, the motor will automatically cut off in case of leakage, do not move the fuse;
4. Don't let the machine work when there is no one, and don't move the children;
5. It is recommended to use the company's high-quality concentrated snow oil, otherwise it will affect the effect;
6. When the snow oil is used up, don't let the machine work to avoid the pump heating and damaging the components;
7. There will be a certain amount of noise when the machine is working, which is normal;
8. If the foam gets into the eyes or mouth, please rinse with water in time. If you feel unwell, please consult a doctor in time;

STEPS

- 1: Prepare the bucket; mix the snow oil with pure water at a ratio of 1:20;
- 2: Check whether the blower is blocked; put the oil pipe into the oil, connect the panel power interface and manual control interface;
- 3: Plug in the power supply, adjust the angle of the machine, and turn the "red" button to start the machine;
- 4: Manual control: rotating "red" can also adjust the amount of snowflakes;
- 5: Machine panel: "■" "○" adjust the size of the snowflake function;
- 6: Machine panel: Rotate "red" to control the amount of snowflakes;
- 7: Remote control: "■" Turn on, the machine will start ringing after turning on; press "▲" again without letting go, the snowflakes will slowly come out, you can release them, and then press "▲" "▼" to adjust the amount of snowflakes; "⏻" Shut down;

Power: 2000W

Voltage: AC110V/220V 50/60Hz

Control method: manual/remote control

Coverage area: 100 square meters


Jet distance: 10-15 meters

Net weight (machine): 20kg

Packing: wooden frame/air case

Flight case: L86*W52*H62

Net weight (box): 19.7kg

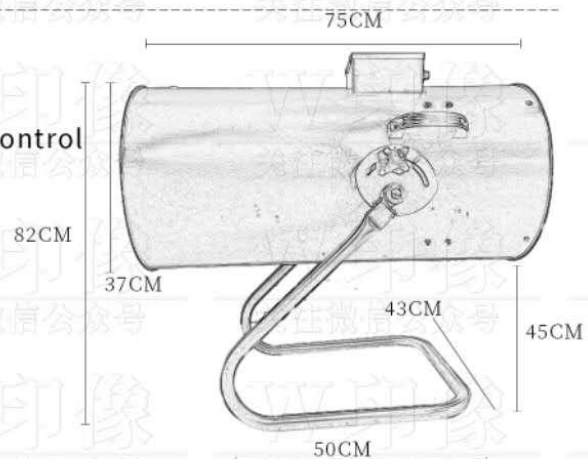

PANEL OPERATION

